





**KEEP THE
SCOREBOARD
IN SHADE**



**Protect the
Bluetooth
module
against **RAIN****

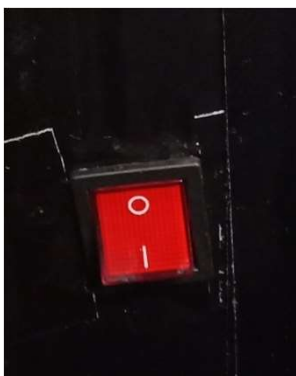

**Turn off the
scoreboard
if not used**

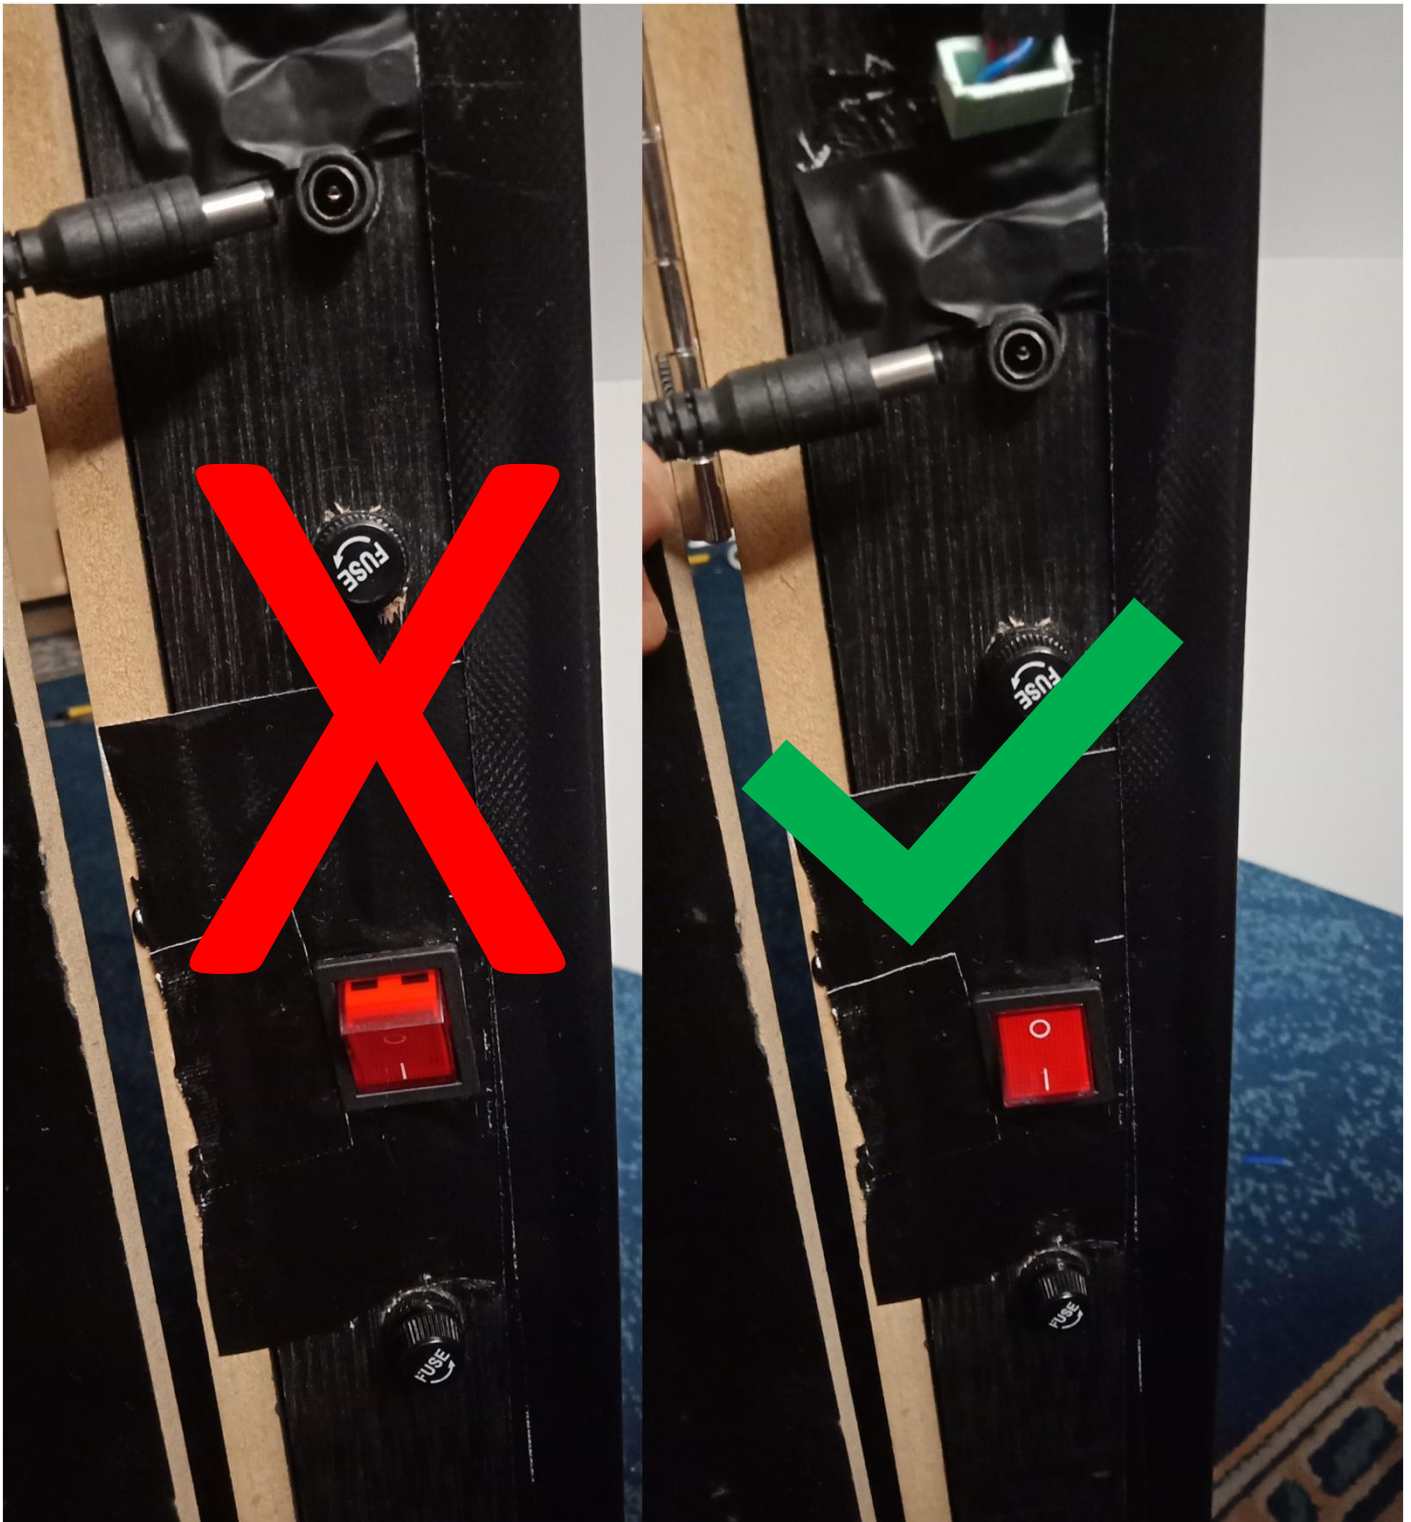

Turn off the switch first and plug out the power cable.
Turn off the switch first and plug in the power cable




Do NOT move the scoreboard while it is ON.
Always turn it off first before moving. Move it
how you would move your TV or Fridge.

**NEVER
MOVE
THE
SCOREBOARD
WHILE
IT IS
ON**



**PROTECT THE
POWER
ADAPTER FROM
DIRECT
SUNLIGHT**

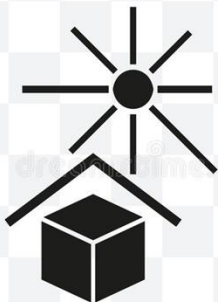



**FIX THE
SCOREBOARD**

**IT SHOULD NOT
WIGGLE**